




05-09 GM Truck Module w/ CPE Lines

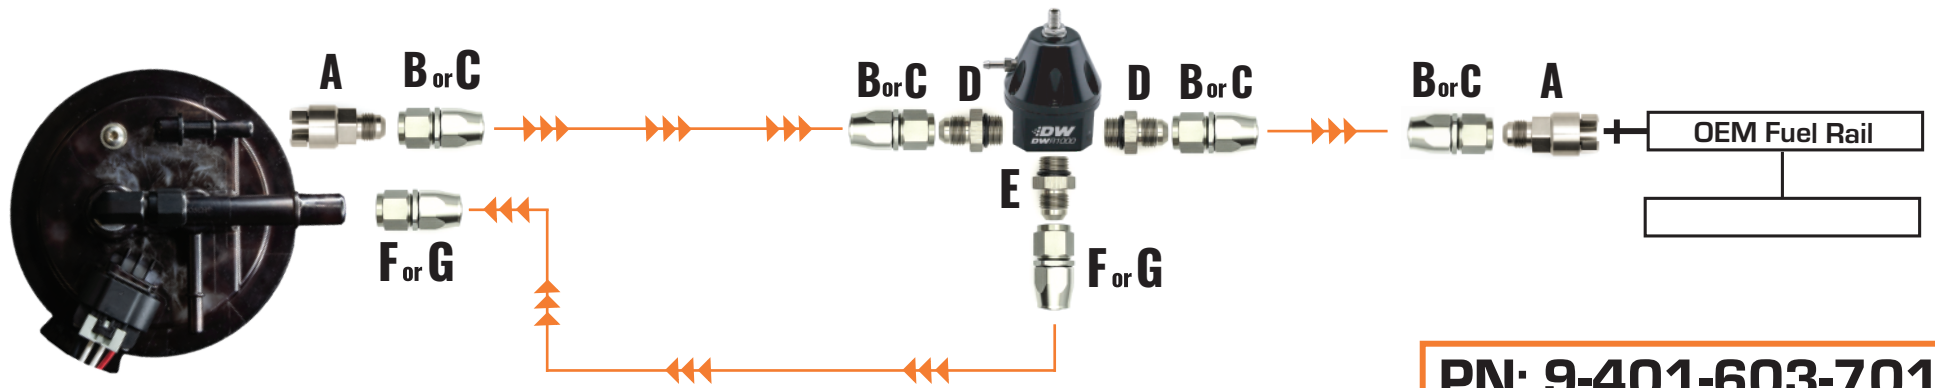

PN: 9-401-603-7012


- A 6-02-0104 8AN Male Flare to 3/8" Female EFI Quick Connect Adapter
- B 6-02-0805 8AN Female Swivel Straight Hose End CPE
- C 6-02-0807 8AN Female Swivel 90-degree Hose End CPE
- D 6-02-0405 6AN ORB Male to 8AN Male Flare Adapter (incl O-Ring)
- E 6-02-0404 6AN ORB Male to 6AN Male Flare Adapter (incl O-Ring)

- F 6-02-0801 6AN Female Swivel STRAIGHT Hose End CPE
- G 6-02-0803 6AN Female Swivel 90-degree Hose End CPE

For installation assistance call 405 217 0701 or email techsupport@deatschwerks.com



05-09 GM Truck Module w/ PTFE Lines

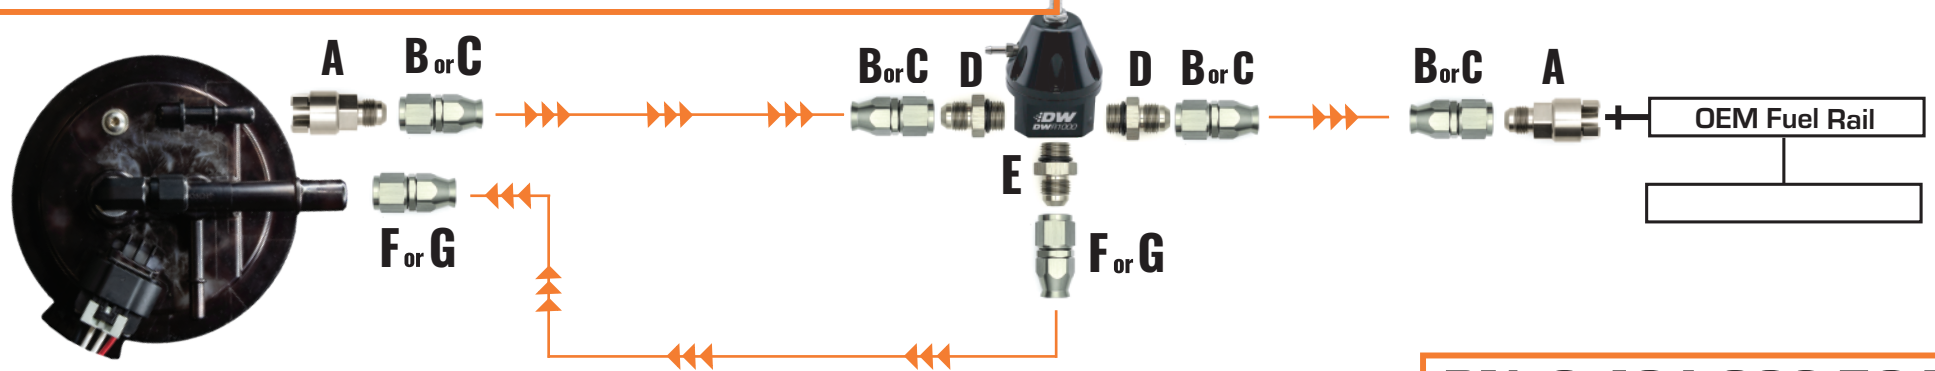

PN: 9-401-603-7013

- A 6-02-0104 8AN Male Flare to 3/8" Female EFI Quick Connect Adapter
- B 6-02-0854 8AN Female Swivel Straight Hose End PTFE
- C 6-02-0856 8AN Female Swivel 90-degree Hose End PTFE
- D 6-02-0405 6AN ORB Male to 8AN Male Flare Adapter (incl O-Ring)
- E 6-02-0404 6AN ORB Male to 6AN Male Flare Adapter (incl O-Ring)

- F 6-02-0850 6AN Female Swivel STRAIGHT Hose End PTFE
- G 6-02-0852 6AN Female Swivel 90-degree Hose End PTFE

For installation assistance call 405 217 0701 or email techsupport@deatschwerks.com